



# Quick Start Guide



2461179

## Cisco 500 Series Stackable Managed Switches

# Welcome

Thank you for choosing the Cisco 500 Series Stackable Managed Switch, a Cisco network communications device. This device is designed to be operational right out of the box as a standard layer 2 and 3 switch. In the factory default configuration, it will forward packets between connecting devices after power up.

Before you begin installing the switch, make sure you have all of the package contents available, access to the *Cisco 500 Series Stackable Managed Switch Administration Guide*, and a PC with a web browser for using web-based system management tools.

## Package Contents

- Cisco 500 Series Switch
- Rackmount Kit
- Power Cord
- This Quick Start Guide
- Product CD
- Serial Cable
- Rubber Feet

This guide will familiarize you with the layout of the switch and describe how to deploy the device in your network. For additional information, see [www.cisco.com/smb](http://www.cisco.com/smb).

## 1

# Mounting the Cisco Stackable Managed Switch

There are two ways to physically install the switch:

- Set the switch on a flat surface.
- Mount the switch in a standard rack (1 rack unit).

Do not deploy the device in a location where any of the following conditions exist:

**High Ambient Temperature**—Refer to the following table for the high ambient temperature rating of each switch.

Ambient Temperature Ratings	
Switch Model	High Temperature
SF500-24	104 degrees Fahrenheit (40 Centigrade)
SF500-24P	104 degrees Fahrenheit (40 Centigrade)
SF500-24MP	122 degrees Fahrenheit (50 Centigrade)
SF500-48	104 degrees Fahrenheit (40 Centigrade)
SF500-48P	104 degrees Fahrenheit (40 Centigrade)
SF500-48MP	122 degrees Fahrenheit (50 Centigrade)
SG500-28	104 degrees Fahrenheit (40 Centigrade)
SG500-28P	104 degrees Fahrenheit (40 Centigrade)
SG500-28MPP	122 degrees Fahrenheit (50 Centigrade)
SG500-52	104 degrees Fahrenheit (40 Centigrade)
SG500-52P	104 degrees Fahrenheit (40 Centigrade)
SG500-52MP	122 degrees Fahrenheit (50 Centigrade)
SG500X-24	104 degrees Fahrenheit (40 Centigrade)
SG500X-24P	104 degrees Fahrenheit (40 Centigrade)
SG500X-24MPP	122 degrees Fahrenheit (50 Centigrade)
SG500X-48	104 degrees Fahrenheit (40 Centigrade)
SG500X-48P	104 degrees Fahrenheit (40 Centigrade)
SG500X-48MP	122 degrees Fahrenheit (50 Centigrade)
SG500XG-8F8T	122 degrees Fahrenheit (50 Centigrade)

**Reduced Air Flow**—Both side panels must be unobstructed to prevent overheating.

**Mechanical Overloading**—The device should be level, stable, and secure to prevent it from sliding or shifting out of position.


**Circuit Overloading**—Adding the device to the power outlet must not overload that circuit.

## Rack-Mount Placement

**STEP 1** Remove the four screws from each side near the front of the switch. Retain the screws for re-installation. Do not remove the four screws from each side near the back of the switch.

**STEP 2** Place one of the supplied spacers on the side of the switch so the four holes of the spacers align to the screw holes. Place a rack mount bracket next to the spacer and reinstall the four screws removed in step 1.

**NOTE** Suggested screw size is 6.9 mm (diameter) x 6 mm (height). If your screws are not long enough to reattach the bracket with the spacer in place, attach the bracket directly to the case without the spacer.

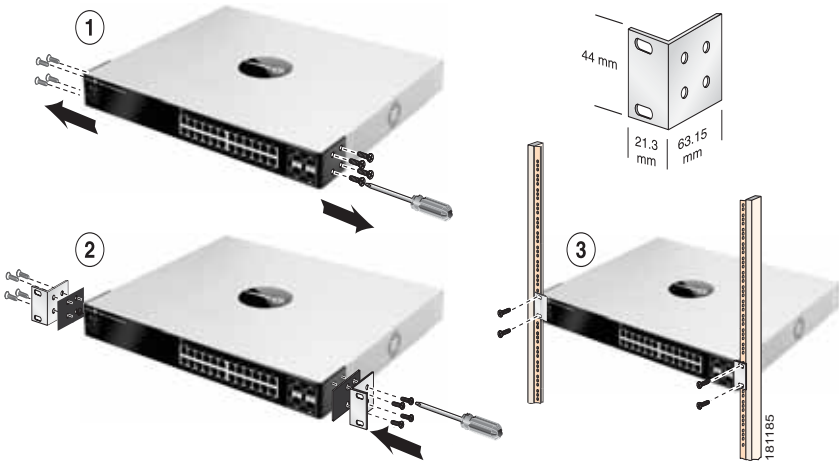

**STEP 3** Repeat **Step 2** for the other side of the switch.

**STEP 4** After the mounting hardware has been securely attached, the switch is now ready to be installed into a standard 19-inch rack.

**CAUTION**

---

For stability, load the rack from the bottom to the top, with the heaviest devices on the bottom. A top-heavy rack is likely to be unstable and might tip over.

---

**2**

## Connecting Network Devices

To connect the switch to the network:

---

**STEP 1** Connect an Ethernet cable to an Ethernet port of a computer, printer, network storage, or other network device.

**STEP 2** Connect the other end of the network Ethernet cable to one of the numbered switch Ethernet ports.

The Ethernet port light turns green when the connection is active. Refer to [External Features of the Cisco 500 Series Stackable Managed Switch](#) for details about the different ports and LEDs on each switch.

**STEP 3** Repeat **Step 1** and **Step 2** for each device you want to connect to the switch.

**NOTE** Cisco strongly recommends using Cat5 or better cable for Gigabit connectivity. When you connect your network devices, do not exceed the maximum cabling distance of 100 meters (328 feet). It can take up to one minute for attached devices or the LAN to be operational after it is connected. This is normal behavior.

**NOTE** 500 Series switches have both standard Ethernet and stack ports. Standard ethernet ports can not be used for stacking. Refer to [Stacking the Switches](#) for additional details.

---

## Power over Ethernet (PoE) Considerations

If your switch is one of the PoE models, consider the following table for specific information:

500 Series Switches with Power Over Ethernet			
Model	Power Dedicated to PoE	Number of Ports Supporting PoE	PoE Standard Supported
SF500-24P	180 Watt	24	802.3af and 802.3at
SF500-24MP	375 Watts	24	802.3af and 802.3at
SF500-48P	375 Watts	48	802.3af and 802.3at
SF500-48MP	740 Watts	48	802.3af and 802.3at
SG500-28P	180 Watt	24	802.3af and 802.3at
SG500-28MPP	740 Watts	24	802.3af and 802.3at
SG500-52P	375 Watts	48	802.3af and 802.3at
SG500-52MP	740 Watts	48	802.3af and 802.3at
SG500X-24P	375 Watts	24	802.3af and 802.3at
SG500X-24MPP	740 Watts	24	802.3af and 802.3at
SG500X-48P	375 Watts	48	802.3af and 802.3at
SG500X-48MP	740 Watts	48	802.3af and 802.3at

**NOTE** The switch can deliver a maximum of 15.4 Watts to any 10/100 Gigabit PoE port. SF500-24MP, SF500-48MP, SG500X-24MPP, and SG500X-48MP can deliver a maximum of 30 Watts to any PoE port.



### WARNING

The switch is to be connected only to PoE networks without routing to the outside plant.



### CAUTION

Consider the following when connecting switches capable of supplying PoE:

The PoE models of the switches are PSE (Power Sourcing Equipment) that are capable of supplying DC power to attaching PD (Powered Devices). These devices include VoIP

phones, IP cameras, and wireless access points. The PoE switches can detect and supply power to pre-standard legacy PoE Powered Devices. Due to the support of legacy PoE, it is possible that a PoE switch acting as a PSE may mistakenly detect and supply power to an attaching PSE, including other PoE switches, as a legacy PD.

Even though PoE switches are PSE, and as such should be powered by AC, they could be powered up as a legacy PD by another PSE due to false detection. When this happens, the PoE switch may not operate properly and may not be able to properly supply power to its attaching PDs.

To prevent false detection, you should disable PoE on the ports on the PoE switches that are used to connect to PSEs. You should also first power up a PSE device before connecting it to a PoE switch. When a device is being falsely detected as a PD, you should disconnect the device from the PoE port and power recycle the device with AC power before reconnecting its PoE ports.

---

## 3

# Configuring the 500 Series Stackable Managed Switch

## Before You Begin

Verify the managing computer requirements in the product release notes. The switch can be accessed and managed by two different methods; over your IP network using the web-based interface, or by the Command Line Interface (CLI) through the console port. Using the console port requires advanced user skills.

## Accessing and Managing Your Switch

### Use the Web-Based Interface

To access the switch by using the web-based interface, you must know the IP address the switch is using. The switch uses the factory default IP address of **192.168.1.254** by default.

When the switch is using the factory default IP address, the System LED flashes continuously. When the switch is using a DHCP server-assigned IP address or an administrator has configured a static IP address, the System LED is on solid (DHCP is enabled by default).

**NOTE** If you are managing the switch through a network connection and the switch IP address is changed, either by a DHCP server or manually, your access to the switch will be lost. You must enter the new IP address the switch is using into your browser to use the web-based interface. If you are managing the switch through a console port connection, the link is retained.

To configure the switch through an IP network:

---

**STEP 1** Power on the computer and the switch.

**STEP 2** Set the IP configuration on your computer.

- a. If the switch is using the factory default IP address of **192.168.1.254**, you must choose an IP address for the computer in the range of 192.168.1.1-192.168.1.253 that is not already in use.
- b. If the IP address is assigned by a DHCP server, make sure the DHCP server is running and can be reached from the switch and the computer. It might be necessary to disconnect and reconnect the devices for them to discover their new IP addresses from the DHCP server.

**NOTE** Details on how to change the IP address on your computer depend upon the type of architecture and operating system you are using. Use the computer Help and Support functionality to search for "IP Addressing."

**STEP 3** Open a Web browser window. If you are prompted to install an Active-X plug-in when connecting to the device, follow the prompts to accept the plug-in.

**STEP 4** Enter the switch IP address in the address bar and press **Enter**. For example, **http://192.168.1.254**.

The Switch Login Page displays.

**STEP 5** Enter the default login information:

- Username is **cisco**
- Default password is **cisco** (passwords are case sensitive)

**STEP 6** If this is the first time that you have logged on with the default username and password, the *Change Password Page* opens. The rules for constructing a new login and password are displayed on the page. Enter a new administrator password and click **Apply**.



**CAUTION**

---

Make sure that any configuration changes made are saved to the Startup configuration before exiting from the web-based interface by clicking on the **Save** icon. Exiting before you save your configuration will result in all current changes being lost the next time the switch is rebooted.

---

The **Getting Started** window displays. You are now ready to configure the switch. Refer to the *Cisco 500 Series Stackable Managed Switch Administration Guide* for further information.

---

## Use the console port

To configure the switch by using the console port:

---

- STEP 1** Connect a computer to the switch console port by using the provided serial cable.
- STEP 2** Start a terminal application such as HyperTerminal on the computer.
- STEP 3** Configure the utility with the following parameters:
- 115200 bits per second (with release 1.2.7 of the firmware, autobaud detection is enabled by default, so the switch should detect the speed after you press Enter).
  - 8 data bits
  - no parity
  - 1 stop bit
  - no flow control
- STEP 4** Enter a user name and password. User names and passwords are both case sensitive and alpha-numeric. The default username is **cisco**, and the default password is **cisco**.
- STEP 5** If this is the first time that you have logged on with the default username and password, the following message appears:
- ```
Please change your password from the default
settings. Please change the password for better
protection of your network. Do you want to change
the password (Y/N) [Y]?
```
- STEP 6** Select **Y**, and enter a new administrator password.



**CAUTION**

Make sure that any configuration changes are saved before exiting by issuing the command:

```
copy running-config startup-config
```


You are ready to configure the switch. Refer to the *Cisco 500 Series Stackable Managed Switch Administration Guide* for further information.

**NOTE** If you are not using DHCP on your network, set the IP address type on the switch to **Static** and change the static IP address and subnet mask to match your network topology. Failure to do so may result in multiple switches using the same factory default IP address of 192.168.1.254.

### Stacking the Switches

Before configuring the switches as a stack, refer to the Cisco 500 Series Stackable Managed Switch Administration Guide for additional details. Refer to the front panel graphics in **External Features of the Cisco 500 Series Stackable Managed Switch** to help with the stack port descriptions and supported modules.

The following graphic shows the stack ports to assist in connecting the devices in a stack:

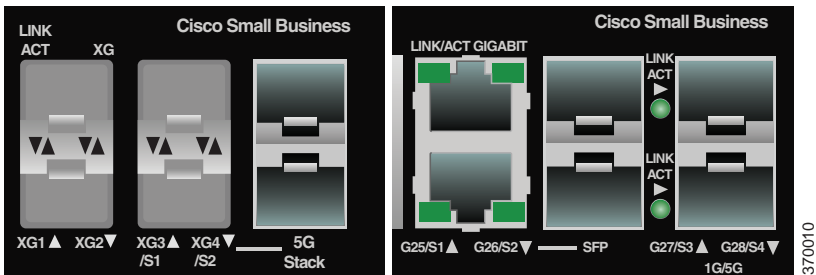

The 500X model is on the left, and the Sx500 model is on the right. The SG500XG-8F8T model is shown below.



**TIP** The default stack ports on the 500X are XG3/S1 and XG4/S2. If the correct module is plugged into XG3/S1 and XG4/S2, the switch should be able to detect the connection and configure the speed according to the module capability without any manual configuration. The 5G/S1 and 5G/S2 interfaces on the 500X need to be configured manually via the CLI or web-based interface in order to utilize these ports as stack ports.

**TIP** The default stack ports on the 500 are S3 and S4. If the correct module is plugged into S3 and S4, the switch should be able to detect the connection and configure the speed according to the module capability without any manual configuration. The S1 and S2 interfaces on the 500 need to be configured manually via the CLI or web-based interface in order to utilize these ports as stack ports.

The default stack ports on a switch function as regular Ethernet ports only if you configure them to do so, or if the switch is configured to operate in standalone mode. You cannot mix the stack speeds between the switches or ports.

**TIP** By default, SG500XG-8F8T is in standalone mode and has no stack port. Any of the ports on the SG500XG-8F8T switch can be converted to a stack port. If you manually assign a Unit ID to one unit, you should manually assign Unit IDs to all units. Using both system-assigned and manually-assigned IDs in your network can impact system performance.



**WARNING** Stack ports must be either configured with the same port speed or have the same speed capability on the module/cable plug in. If the port speed is configured as auto, then the module plugged into these two ports will need to have the same speed capability, otherwise the switch will not be able to form as a stack with multiple units.

A stack can have up to eight 500 series switches in it.

Switches in the same stack are connected together through their stack ports. Depending on the type of stack ports and the desired speed, you may need regular Cat5 or better Ethernet cables and/or Cisco approved modules or cables for the 500 Series switches.

Changing the stack mode of a switch requires a reboot of the switch.

## Stack Unit Modes

Devices can operate in one of the following Stack Unit modes:

- **Standalone**—The device is not connected to any other device and does not have a stack port.
- **Native Stacking**—A device can connect to other devices of the same type through its stack ports to form a stack. All units in a native stack must be of the same type (either all Sx500s or all SG500Xs).
- **Basic Hybrid**—A device can connect to other devices from the 500 series to form a stack. In this mode, VRRP and/or RIP are not supported. The GUI for Sx500 devices is displayed, even if the stack master is SG500X, since the feature set is that of the Sx500.

In this mode, any type of device can function as master or backup. Only 5G stacking ports can be used as stack ports.

- **Advanced Hybrid**—A device can connect to other devices from the 500 series to form a stack. In this mode, VRRP and/or RIP are supported. Only SG500X devices can function as master/backup, and auto numbering of units is not supported.

Sx500 devices can only be slaves, therefore up to six Sx500 units can be stacked with two SG500X devices.

- **Advanced Hybrid XG** — A device in the SG500XG series can connect to other SG 500X devices to form a stack, with the SG500X feature set. In this mode, VRRP and/or RIP are supported.

Any device can function as master, backup, or slave.

## Stack Configuration Options

The following describes some typical stack configurations:

| Possible Stack Configuration                                                                                                                                                                       | Stack Ports Speed                        |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------|
| SG500Xs in Native Stacking mode.                                                                                                                                                                   | 1G/10G or 1G/5G                          |
| Sx500s in Native Stacking mode.                                                                                                                                                                    | 1G/5G (default) or 1G Copper/SFP (Combo) |
| SG500Xs and Sx500s in Basic Hybrid mode, where either device can serve as master, backup, or slave.                                                                                                | 1G/5G                                    |
| SG500Xs and Sx500s in Advanced Hybrid mode, without backup. <ul style="list-style-type: none"><li>• <b>Master:</b> SG500X</li><li>• <b>Slaves:</b> Either type of device</li></ul>                 | 1G/5G                                    |
| SG500Xs and Sx500s in Advanced Hybrid mode. <ul style="list-style-type: none"><li>• <b>Master:</b> SG500X</li><li>• <b>Backup:</b> SG500X</li><li>• <b>Slaves:</b> Either type of device</li></ul> | 1G/5G                                    |
| SG500XGs in Native Stacking mode.                                                                                                                                                                  | 10G copper/SFP+                          |
| SG500XGs and SG500Xs in Advanced Hybrid XG mode, where either device can serve as master, backup, or slave.                                                                                        | SG500X: SFP+<br>SG500XG: 10G copper/SFP+ |

## Example Stacking Scenarios

**NOTE** Speeds listed below that use *xx-auto* mean auto-detection of the SFP speed.

For the SG500X-24, SG500X-24P, SG500X-24MPP, SG500X-48, and SG500X-48P, and SG500X-48MP devices, the following information applies:

### Stacking Option One (default option):

- Ports XG3/S1 and XG4/S2 are configured as stack ports
  - Speed—1G, 10G, 1G/10G-auto
  - 5G is not available

- Ports XG1 and XG2 are available as standard network ports
  - Speed—1G or 10G

### Stacking Option Two:

- Ports XG3/S1 and XG4/S2 are not available
- Port S1, S2 and 5G are configured as stack ports
  - Speed—1G, 5G, 1G/5G-auto
- Ports XG1 and XG2 are available as standard network ports
  - Speed—1G or 10G

### Non-Stacking standalone option:

- Ports XG3/S1 and XG4/S2 available as standard network ports
  - Speed—1G or 10G
- Port S1, S2 and 5G are not available
- Ports XG1 and XG2 are available as standard network ports
  - Speed—1G or 10G

For the SF500-24, SF500-24P, SF500-24MP, SF500-48, SF500-48P, SF500-48MP, SG500-28, SG500-28P, SG500-28MPP, SG500-52, SG500-52P, and SG500-52MP devices, the following information applies:

### Stacking Option One (default option):

- Ports S3 and S4 are configured as stack ports
  - Speed—1G, 5G, 1G/5G-auto
- Ports S1 and S2 are available as standard network ports
  - Speed—1G or 100M
- Port S1/SFP, S2/SFP are available as standard network ports
  - Speed—1G or 100M

**NOTE** These two connection options (S1 and S2 or S1/SFP and S2/SFP) cannot run at the same time, they are configured as one or the other. Any connections using the SFP ports take precedence over the other combination ports.

### Stacking Option Two:

- Ports S1/SFP and S2/SFP are configured as stack ports
  - Speed—1G

- Ports S3 and S4 are available as standard network ports
  - Speed—1G

**Non-Stacking standalone option:**

- Port S1/SFP, S2/SFP are available as standard network ports
  - Speed—1G or 100M
- Ports S3 and S4 are configured as standard networking ports
  - Speed—1G

# 4


## External Features of the Cisco 500 Series Stackable Managed Switch

This section describes the exterior of the switches including ports, LEDs, and connectors.

### Front Panel

The ports and LEDs are located on the front panel of the switch.


### 500X Left Side

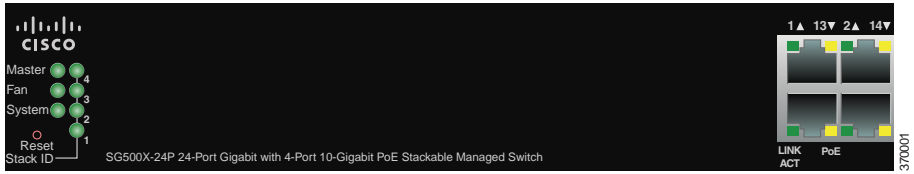

### 500 Left Side




### SG500XG-8F8T Left Side

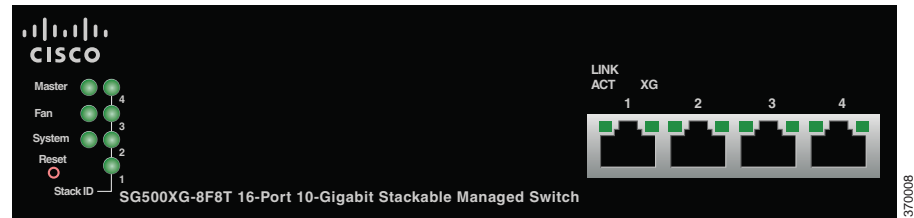





## 500X Right Side

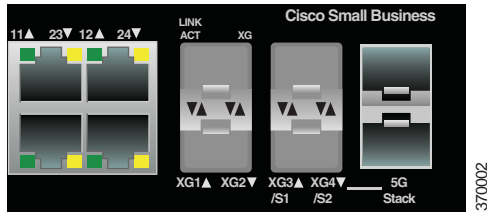

## 500 Right Side

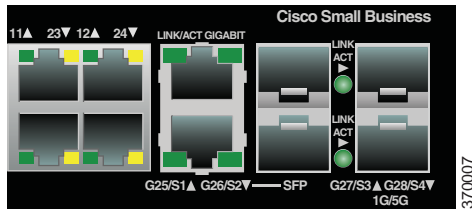

## SG500XG-8F8T Right Side

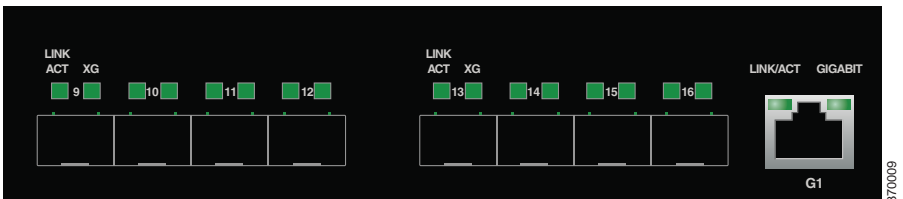

**RJ-45 Ethernet Ports**—Use these ports to connect network devices, such as computers, printers, and access points, to the switch. Standard Ethernet ports can not be used to stack the switches.

**SFP (if present)**—The small form-factor pluggable (SFP) are connection points for modules, so the switch can link to other switches. These ports are also commonly referred to as miniGigaBit Interface Converter (miniGBIC) ports. The term SFP will be used in this guide.

- SFP ports are compatible with Cisco modules MGBSX1, MGBLH1, MGBLX1, MGBBX1, MFELX1, MFEFX1, and MFE BX1, as well as other brands of modules.
- Cisco SFP+ optical modules that are supported in the 500X switches are: SFP-10G-SR, SFP-10G-LRM, and SFP-10G-LR.

- The 500 and 500X switches support the following SFP+ Copper Cable modules for stacking: SFP-H10GB-CU1M, SFP-H10GB-CU3M, and SFP-H10GB-CU5M.
- SFP interface is a combination port, shared with one other RJ-45 interface. When the SFP is active, the adjacent RJ-45 port is disabled.
- The LEDs of the shared RJ-45 port light to respond to the SFP interface traffic.

## Front Panel LEDs

**Master**—(Green) Lights steady when this switch is a stack master.

**Fan**—(Green) Lights steady when the cooling fan is operational, blinks green if there is a failure.

**System LED**—(Green) Lights steady when the switch is powered on, and flashes when booting, performing self tests, or acquiring an IP address. If the LED flashes Amber, the switch has detected a hardware failure.

**Stack ID**—(Green) Lights steady when this switch is stacked and the corresponding number indicates its Stack ID. When a switch has a Stack ID greater than 4, a combination of the LEDs will light up to add up to the Stack ID. For example, Stack ID #5 is LED#1 and LED#4, Stack ID #8 will show LED#1, LED#3 and LED#4.

**NOTE** The above LEDs are found on each model of the switch. The following LEDs are only present on switch models that have those capabilities:

**LINK/ACT LED**—(Green) Located on the left of each port. The light is steady when a link between the corresponding port and another device is detected. Flashes when the port is passing traffic.

**PoE (if present)**—(Amber) Located on the right of a PoE port. Lights steady to indicate that power is being supplied to a device attached to the corresponding port.

**100M LED (if present)**—(Green) Located on the right of the port. Lights steady when another device is connected to the port, is powered on, and a 100 Mbps link is established between the devices. When the LED is off, the connection speed is under 100 Mbps or nothing is cabled to the port.

**XG LED (if present)**—(Green) Located on the right of a 10 G port. Lights steady when another device is connected to the port, is powered on, and a 10 G link is established between the devices. When the LED is off, the connection speed is under 10 G or nothing is cabled to the port.

**Gigabit LED (if present)**—(Green) Located on the right of a GE port. Lights steady when another device is connected to the port, is powered on, and a 1000 Mbps link is established between the devices. When the LED is off, the connection speed is under 1000 Mbps or nothing is cabled to the port.

**SFP (if present)**—(Green) Located on the right of a GE port. Lights steady when a connection is made through the shared port. Flashes when the port is passing traffic.

## Reset Button

The switch can be reset by inserting a pin or paper clip into the reset button opening on the front panel of the switch. See [Returning the Device to the Factory Default Settings and Troubleshooting](#) for details.

## Back Panel

The power port and console port are located on the back panel of the switch.



**Power**—Connects the switch to AC power.

**Console**—Connects a serial cable to a computer serial port so that it can be configured by using a terminal emulation program.

# 5

## Returning the Device to the Factory Default Settings and Troubleshooting

To use the **Reset** button to reboot or reset the switch, do the following:

- To **reboot** the switch, press and hold the **Reset** button for less than 10 seconds.
- To **restore** the switch configuration to the factory default settings:
  1. Disconnect the switch from the network or disable all DHCP servers on your network.
  2. With the power on, press and hold the **Reset** button for more than 10 seconds.

## Troubleshoot Your Connection

If you cannot access your switch from the web-based interface, the switch might not be reachable from your computer. You can test network connections by using **ping** on a computer running Windows:

---

**STEP 1** Open the Terminal application.

**STEP 2** Enter the **ping** command and the *switch IP address*. For example **ping 192.168.1.254** (the default IP address of the switch).

If you can reach the switch, you should get a reply similar to the following:

```
Pinging 192.168.1.254 with 32 bytes of data:  
Reply from 192.168.1.254: bytes=32 time<1ms TTL=128
```

If you cannot reach the switch, you should get a reply similar to the following:

```
Pinging 192.168.1.254 with 32 bytes of data:  
Request timed out.
```

---

## Possible Causes and Resolutions

Bad Ethernet connection:

Check the LEDs for proper indications. Check the connectors of the Ethernet cable to ensure they are firmly plugged into the switch and your computer.

Bad console port connection:

Check the console cable connectors to make sure they are firmly plugged into the switch and your computer. Make sure the terminal application is configured with the correct parameters.

Wrong IP address:

Make sure you are using the correct IP address for the switch. You can determine the status of how the switch obtained the current IP address by observing the system LED. You can determine the current IP address of the switch through the console port interface by using the CLI, or from your network administrator.

Make sure that no other device is using the same IP address as the switch.

#### No IP route:

If the switch and your computer are in different IP subnets, you need one or more routers to route the packets between the two subnets.

#### Unusually long access time:

Most connections will be available in a few seconds. Due to the standard spanning tree loop detection logic, adding new connections might take 30 to 60 seconds for the affected interfaces and/or LAN to become operational.

## 6

## Where to Go From Here

| Support                                        |                                                                                                                                                                                          |
|------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cisco Support Community                        | <a href="http://www.cisco.com/go/smallbizsupport">www.cisco.com/go/smallbizsupport</a>                                                                                                   |
| Cisco Support and Resources                    | <a href="http://www.cisco.com/go/smallbizhelp">www.cisco.com/go/smallbizhelp</a>                                                                                                         |
| Phone Support Contacts                         | <a href="http://www.cisco.com/en/US/support/tsd_cisco_small_business_support_center_contacts.html">www.cisco.com/en/US/support/tsd_cisco_small_business_support_center_contacts.html</a> |
| Cisco Firmware Downloads                       | <a href="http://www.cisco.com/go/smallbizfirmware">www.cisco.com/go/smallbizfirmware</a><br>Select a link to download firmware for Cisco Small Business Products. No login is required.  |
| Product Documentation                          |                                                                                                                                                                                          |
| Cisco Switches                                 | <a href="http://www.cisco.com/go/500switches">www.cisco.com/go/500switches</a>                                                                                                           |
| Regulatory, Compliance, and Safety Information | <a href="http://www.cisco.com/en/US/docs/switches/lan/csb_switching_general/rcsi/Switch_RCSI.pdf">www.cisco.com/en/US/docs/switches/lan/csb_switching_general/rcsi/Switch_RCSI.pdf</a>   |
| Warranty Information                           | <a href="http://www.cisco.com/go/warranty">www.cisco.com/go/warranty</a>                                                                                                                 |
| Other Cisco Resources                          |                                                                                                                                                                                          |
| Cisco Partner Central (Partner Login Required) | <a href="http://www.cisco.com/web/partners/sell/smb">www.cisco.com/web/partners/sell/smb</a>                                                                                             |
| EU Lot 26 Test Results                         | <a href="http://www.cisco.com/go/eu-lot26-results">www.cisco.com/go/eu-lot26-results</a>                                                                                                 |



## Americas Headquarters

Cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, CA 95134-1706  
USA

<http://www.cisco.com>

Small Business Support US: 1-866-606-1866

[Small Business Support Global Contact Numbers](#)



Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: [www.cisco.com/go/trademarks](http://www.cisco.com/go/trademarks). Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

© 2014 Cisco Systems, Inc. All rights reserved.

78-21488-02



# McGrp.Ru



## Сайт техники и электроники

Наш сайт [McGrp.Ru](http://McGrp.Ru) при этом не является просто хранилищем [инструкций по эксплуатации](#), это живое сообщество людей. Они общаются на форуме, задают вопросы о способах и особенностях использования техники. На все вопросы очень быстро находят ответы от таких же посетителей сайта, экспертов или администраторов. Вопрос можно задать как на форуме, так и в специальной форме на странице, где описывается интересующая вас техника.